

Heritage® Hardwood Shutters and NewStyle® Hybrid Shutters

French Door Worksheet

Please check one:

- French Door with Standard L-Frame _____ Enter actual "A" measurement or 1⁵/₈", whichever is **less**.
- French Door with Trim L-Frame _____
- French Door with Hang Strips (FD) _____ Enter actual "A" measurement or 1³/₈", whichever is **less**.
- French Door Cut-Out (FDC) _____

Sidemark

Line Number

Page Number

FDC measuring tool must be used to ensure handle rotation

1. Determine the ordered width.

$$\boxed{} + \boxed{} + \boxed{} = \boxed{}$$

B A A Ordered Width

2. Determine the ordered height.

$$\boxed{} + \boxed{} + \boxed{} = \boxed{}$$

C A A Ordered Height

3. Determine divider rail location (if French Door Cut-Out, see ordering note #3).


$$\boxed{} + \boxed{} = \boxed{}$$

D A Divider Rail Location

4. For French Door Cut-Outs: Determine the cut-out location (see ordering note #4).

$$\boxed{} + \boxed{} = \boxed{}$$

E A French Door Cut-Out Location

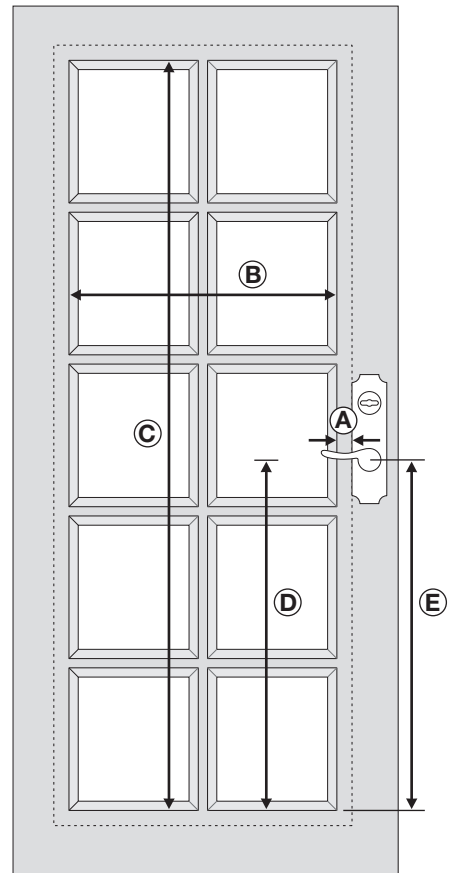

5. **Side-by-side companion door(s) without cut-out:** In some cases, there may be side-by-side companion door(s) that do not require a cut-out. If this is the case, please mark "Yes" below to ensure heights are the same:

Companion Door? YES NO If "Yes", please indicate line #: page #:

Ordering Notes

- Transfer final dimensions to your shutter order form.
- Attach a copy of this worksheet to the order form.
- If using a divider rail with French Door Cut-Outs, **D** and **E** may be the same or otherwise refer to the Reference Guide for the proper divider rail location.
- To ensure exact cut-out locations, the height may increase up to 1" with 2¹/₂" louvers and up to 2" with 3¹/₂" louvers. Be sure there is enough room at the top and bottom of the door to accommodate this possible increase.

Worksheet Key

- A** = Distance between the handle baseplate to glass/molding; enter actual dimension or 1³/₈" (1⁵/₈" with Standard L-Frame), whichever is **less** (minimum distance is 1¹/₂").
- B** = Outside glass/molding measurement width.
- C** = Outside glass/molding measurement height.
- D** = Outside glass/molding measurement to divider rail location.
- E** = Outside glass/molding measurement to center of handle (French Door Cut-Outs only).